



The operation guide for upgrading the firmware of TC44B


1. Please connect the TC44B with the Windows computer by the suitable USB cable or adapter firstly, and double click to open the file “2021-3-ddHiFi-TC44B.exe”, then click “是(Y)” to proceed to next step;

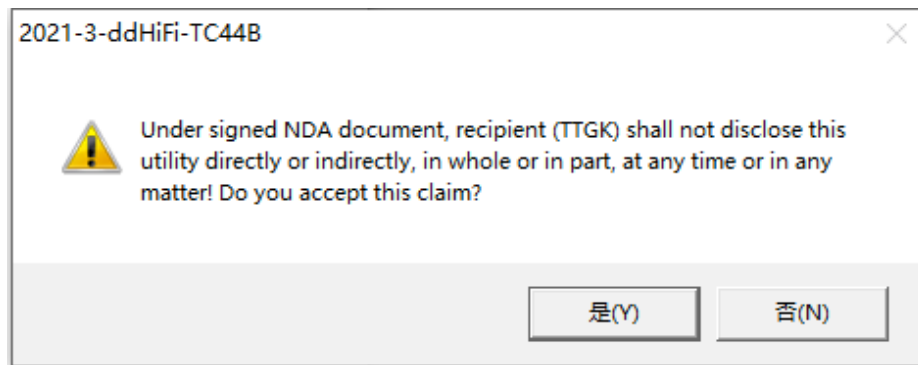

2. Please click the button “**Write EEPROM**”.

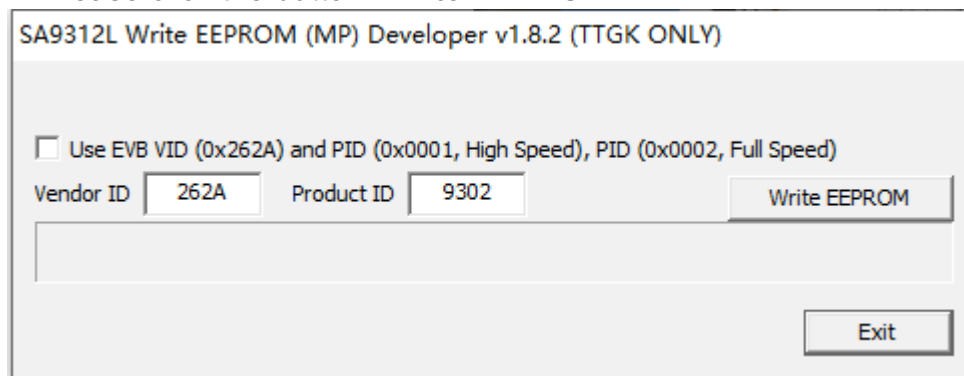

3. The below prompt window will pop up after step 2.
Please disconnect and reconnect the TC44B to the computer again, then click “确定” (Confirm) button to proceed to next step.

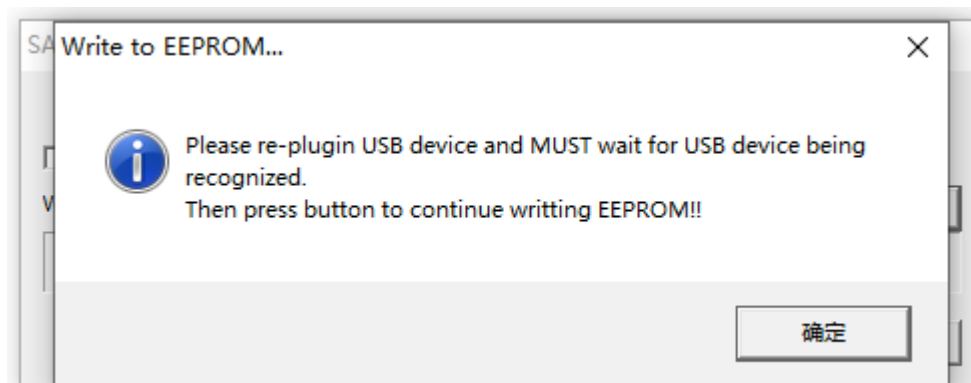

4. When the blue progress bars reach the end and a prompt message **“Write to EEPROM OK!”** appears, which means the firmware upgrade is complete, then please click “Exit” button to close the firmware upgrade tool.

